


Flushing the Cooling System Of Your Yamaha Watercraft

1. Remove the watercraft from the water and place it in a horizontal position.
2. Remove the seat. (Latch on rear of seat)



3. Remove the flushing hose connector cap, and then insert the garden hose adapter into the flushing hose connector and turn it until it is securely connected.
4. Connect the garden hose adapter to a water tap using a garden hose.

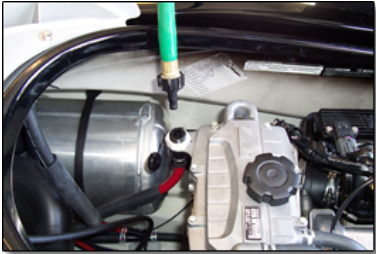

5. Start the engine, and then immediately turn the water supply on until water flows out continually from the jet thrust nozzle.





6. Run the engine at idling speed for about 3 minutes watching the engine condition. If the engine stops while flushing, turn the water supply off immediately and repeat the above steps.

Tip: Pinch hose and disconnect might be quicker



7. Turn the water supply off, and then force the remaining water out of the cooling water passages by alternately squeezing and releasing the throttle lever for 10 to 15 seconds.



8. Stop the engine.
9. Remove the garden hose adapter and install the flushing hose connector cap.

